



MÉTRONOME
LE SON VRAI

DST

CD TRANSPORT
Owner's manual



100% Made in France



SUMMARY

Dear Music Lover,

Congratulations for acquiring a Métronome device! My Team and myself thank you for your trust and your choice.

Métronome Technologie has been designing and handcrafting hi-fi devices for more than 30 years, with the permanent objective to make top high-end products giving the most realistic sound reproduction.

All our products are fully designed in our workshop in the South of France and manufactured by our handcrafters in the most sustainable way.

I wish you long hours of musical pleasure with your new device, and always keep at your disposal for all your questions and feedback on our products.

Very Best regards,
Jérôme

ACCESSORIES

Remote control	4
----------------	---

IMPORTANT INFORMATION

Safety information	5
Position of the device	5

FUNCTIONS

Front panel	6
Information on front panel	6
Back panel	7
Cables to purchase	7
Using the device	8
Remote control	8

DEVICE INTERFACE

Main interface	9
Settings interface	9-10-11

TECHNICAL SPECIFICATIONS

	12
--	----

TROUBLESHOOTING

Tips for a quick diagnosis	13
Some possibles failures	13

WARRANTY

14

ACCESSORIES

Make sure you find the following accessories inside the box:

 
		
Power cable	Manual	Remote control

REMOTE CONTROL

Point the remote control at the sensor on the device.



For safety reasons, the remote control battery is not included. (CR2032 battery).

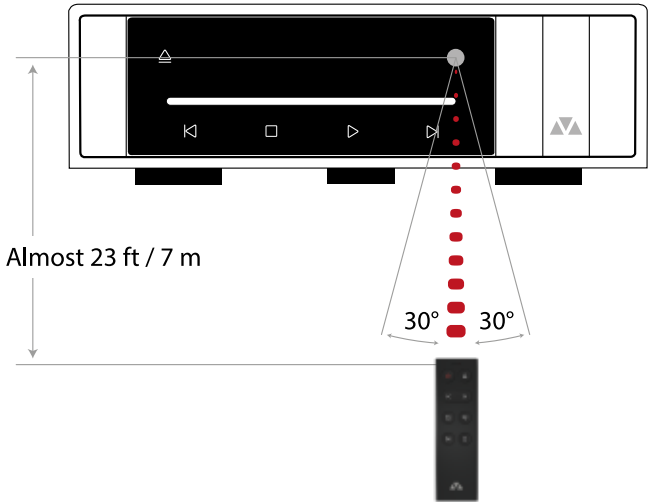

IMPORTANT INFORMATION

SAFETY INFORMATION

To avoid the risk of fire or electric shock, keep the unit in a dry place.

Do not expose it to moisture.

Before connecting and operating the product, please read this manual carefully.

The power supply generates voltages that are dangerous to the human body:

- Do not insert any metal objects through the top cover or on the vents, or on the connectors.
- Never remove the top cover if the unit is not unplugged. Please contact your dealer for service. Product features, specifications and design to change without notice.

Always disconnect your entire system from the mains before connecting or disconnecting any cables, or before cleaning any components.

A three-conductor AC (IEC) main power cable with a grounding connection must be used. To

avoid the risk of shock, all three connections should always be used.

Never use flammable or combustible chemicals for cleaning (especially on the touch screen).

Never operate the unit without the top cover in place.

Never wet the inside of the device with any kind of liquid. Never block the air flow through the ventilation slots.

Never bypass fuses or replace the fuse with another type than specified.
Never attempt to repair the product; contact the factory or your dealer.
Never expose the product to extremely high or low temperatures.

Always unplug all sensitive electronic equipment during lightning storms.

POSITION THE DEVICE

For optimal operation of the unit, please ensure that it is:

- Positioned on a flat surface to make it stable.
- Positioned so that all three feet are in contact with the surface.



FUNCTIONS

FRONT PANEL



INFORMATIONS ON FRONT PANEL

- | | |
|--|--|
| ① Display Screen. | ⑤ Play/Pause touch key:
Press to pause playback. Press again while paused or stopped to resume. |
| ② Eject touch key: CD ejection.
Long press on this key: standby ON / OFF.
(Standby indicator: in standby, this key is lit with low power led.) | ⑥ Skip forward touch key: set the following track.
Long press for fast forward. |
| ③ Skip back touch key: set the previous track.
Long press for rewind. | ⑦ CD slot. |
| ④ Stop touch key: stop during playback. | ⑧ Remote control sensor. |


BACK PANEL



- | | |
|--------------------------------------|--------------------------|
| ① Switch ON / OFF button | ④ I2S Digital output |
| ② Power supply socket | ⑤ S/PDIF Digital output |
| ③ USB service (for firmware updates) | ⑥ AES/EBU Digital output |

CABLES TO PURCHASE

 To use the audio outputs of the device, make sure you have all the necessary cables:

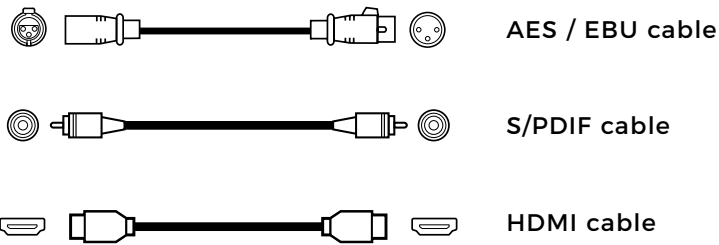

USING THE DEVICE

To power up your device, you must first connect the power cable to the back of your device (2 page 7). This cable is included in the package.

 
Once the power cable is plugged in, press the switch on the back of the device to turn it on (1 page 7).

When it is switched on, you can Insert a CD into the designated slot (7 page 6).

With your remote control, you can navigate the menus to play your music.

Turn off DST after use (O).


REMOTE CONTROL

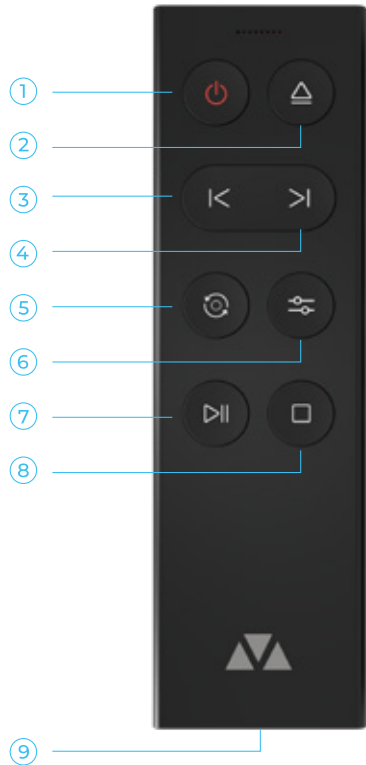

- 1 Standby: ON / OFF.
- 2 CD ejection (long press to force eject).
- 3 Skip back: press to previous track. Long press during playback.
- 4 Skip forward: set the following track. Long press during playback.
- 5 Switch playback mode: normal, repeat track, repeat disc, shuffle. In setting menu, select button.
- 6 Settings: go into settings menu. In settings menu, return button.
- 7 Play/Pause button: Press to pause during playback. If pressed while paused or stopped, resumes playback.
- 8 Stop: press to stop during playback.
- 9 Battery slot.

DEVICE INTERFACE

 MAIN INTERFACE

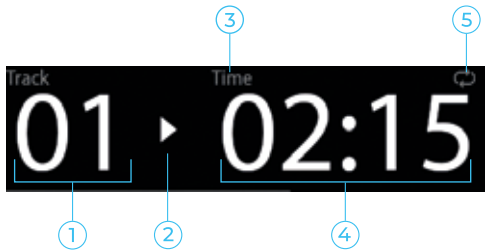


- 1 Track number
When playing, current track number. If stopped, total number of tracks.


- 2 Displaying playback mode
Play, pause, stop, fast forward...
- 3 Time mode
CD time display mode.
- 4 Time
When playing, time info for current track
If stopped, CD total time info.
- 5 Track info
Playback mode.

SETTINGS INTERFACE

 
SAMPLE RATE



 Press ◀ or ▶ of remote to change the output format of the digital outputs.



PCM mode

 


DSD mode

TIME DISPLAY



 
Press ◀ or ▶ of remote to change how CD time will be displayed during playback.



Elapsed time for the current track.



 Total time remaining on the disc.




Remaining time for the current track.


BRIGHTNESS



 Press ◀ or ▶ of remote to change level brightness of the display.



LED ON / OFF

 

Press ◀ or ▶ of remote to enable / disable Front Panel LEDs.



 
AUTO DIMMING

Timers are reset upon any system event (remote control, touch panel, CD playback event...).



Press ◀ or ▶ of remote to change the mode. This function will enable auto dimming of the screen and front LEDs. Multiple timing and behaviours possible depending on the mode.


**Fast mode triggers even during playback (slow modes do not triggers during playback).*




Dimming: 20 min
Screen off: 1 h



 
Dimming: 5 min
Screen off: 15 min



Dimming: 5 s*
Screen off: 15 min*

 

Dimming: none*
Screen off: 5 s*

 

Function is disabled, no dimming.

AUTO STANDBY

Timers are reset upon any system event (remote control, touch panel, CD playback event...).



Press ◀ or ▶ of remote to enable / disable automatic standby switch of the device. When enabled, the device will automatically go into standby state after 1h30 of complete inactivity.



TECHNICAL SPECIFICATIONS

CD

PCM 44.1 kHz / 16 bits

DISPLAY

3.9 inches
Resolution : 480 x 128

INTERFACE

Infrared remote
Touch panel

DIGITAL OUTPUTS

(resampling available)
S/PDIF
PCM 44.1 to 384 kHz / 32 bits
DSD64 to DSD128 DoP
AES/EBU
PCM 44.1 to 384 kHz / 32 bits
DSD64 to DSD128 DoP

I2S
PCM 44.1 to 384 kHz / 32 bits
DSD64 to DSD256

GENERAL SPECIFICATIONS

Consumption
21 W
Standby power
6 W
Operating temperature
+5°C to +35°C
Operating humidity
5% to 90%
USB
1 x Port USB 2.0 (for device update)
Dimensions (LxHxW)
250x70x250 mm
Weight
4.7 kg

TROUBLESHOOTING

TIPS FOR A QUICK DIAGNOSIS

If you notice a fault with your device, check first:

1. All connections are correct?
2. Is the device used as described in the user manual?

If this device is not working properly, please check the symptoms in this section.

If none of the symptoms correspond to any of those described in this manual, disconnect the power to your device and contact your distributor or dealer.

SOME POSSIBLES FAILURES

The device does not turn on:

- Check the power cable connection.
- Check the connections to the wall socket.
- Check the power switch connections.
- Check the fuse.

No sound is emitted:

- Check the connections to all your devices.
- Check the condition of the cables.
- Check that the the selected output format is compatible with the cable link and with the receiver device.

WARRANTY

Métronome Technologie guarantees the components of your Métronome® DST for 2 years from the date of purchase.

In the event of product failure, Métronome Technologie will repair, readjust and, if necessary, replace the equipment provided that all the clauses of the warranty are respected.

In order to initiate service of any kind, it is necessary to obtain authorization from the distributor or dealer before shipping the defective unit.

Please note that any of the following conditions will avoid the warranty:

- Use not in accordance with this manual.
- Abuse, accident or unauthorised modifications to the unit.
- Removal of serial numbers, defacement or tampering.
- Shipment without the complete original boxes and foams.

Métronome Technologie cannot be held responsible for any accidental damage occurring during the operation, breakdown, troubleshooting or repair of your DST.



Find all the information, as well as the technical sheet and update files, on DST webpage by scanning this code.





VIVEZ UNE EXPERIENCE SONORE UNIQUE
LIVE A UNIQUE SENSORY EXPERIENCE

MÉTRONOME TECHNOLOGIE SAS
ZA Garrigue Longue - 166 rue du Castellet
81600 MONTANS - FRANCE

www.metronome.audio
@metronometechnologie
info@metronome.audio
+33(0)5 34 26 11 33